

POWERLINK



ERC10 & ERC20 3 Phase Thyristor Controller instruction manual

1) Installation

The controller should be mounted to allow airflow through the heatsink naturally. The maximum ambient temperature should not exceed 40 Deg. C.

2) Protection Fuse

Suitable fuses should be fitted to protect an ERC10 or ERC20 from overloading. The fuse level depends on the load current rating. The maximum fuse value for an ERC10 is 20A. The maximum fuse value for an ERC20 is 30A.

A 100mA delay fuse which is on the print circuit board is used to protect the low voltage supply of the electronic control circuit.

3) Wiring

An ERC10 or ERC20 controller should be connected according to the wiring diagram as shown in fig. 1. The size of cables for controlling signals should be larger than 0.5 mm sq. and the cable to L, N and cables to the load must be sufficient to withstand the maximum current rating of the LOAD and meet the IEE WIRING REGULATIONS.

4) Set-up procedure

After connecting the load to a power controller, set the input signal to minimum (0V). Switch on the mains supply, the output voltage or current to the load should be zero (except the leakage current or snubber circuit current which is less than 10mA). Gradually increase the input signal and check that the output is switching ON and OFF according to the input signal.

5) ALL STANDARD UNITS ARE FACTORY SET UP AS FOLLOWS


- a) With the input at minimum (0V), switch on the mains supply to an ERC unit.
- b) With an input of 9V for 0-10V input range (for other input range, set the input to 90% of the max. input), adjust the SPAN pot clockwise until the output voltage or current is at maximum.
- c) With input signal at 8V, output should be nearly fully on with slightly off.
- d) With the input at 1V for 0-10V input range (for other input range, set the input to 10% of the max. input), adjust ZERO POT until the output is zero.
- e) With input signal at 2V, the output should be nearly fully off with slightly on.
- d) Repeat step b) and e) until the output is at maximum and zero.

Specification

Supply voltage		380V to 415Vac, 47 to 63Hz
Input signal		0-10V as standard, 22 kilo-ohm min. input impedance
Current ratings		Natural cooling ERC10 - 14A max. ,ERC20 - 25A max. per phase
Cycle Time		typical 3 sec.
Isolation		2500Vrms between input and output
Min. holding current		30mA
Repetitive peak voltage		800V
Operating temp.		0 to 45 Deg. C
Storage temp.		-10 to 80 Deg. C
Dimensions	ERC10	W: 170mm x H: 160mm x D: 70mm
	ERC20	W: 170mm x H: 160mm x D: 105mm
Mounting		DIN rail mounted

Powerlink Electronics Ltd, Powerlink House, Ivy Arch Road, Worthing, West Sussex, BN14 8BX.
Tel: 01903209550 Fax: 01903213526

ERC10 AND ERC20 WIRING DIAGRAM

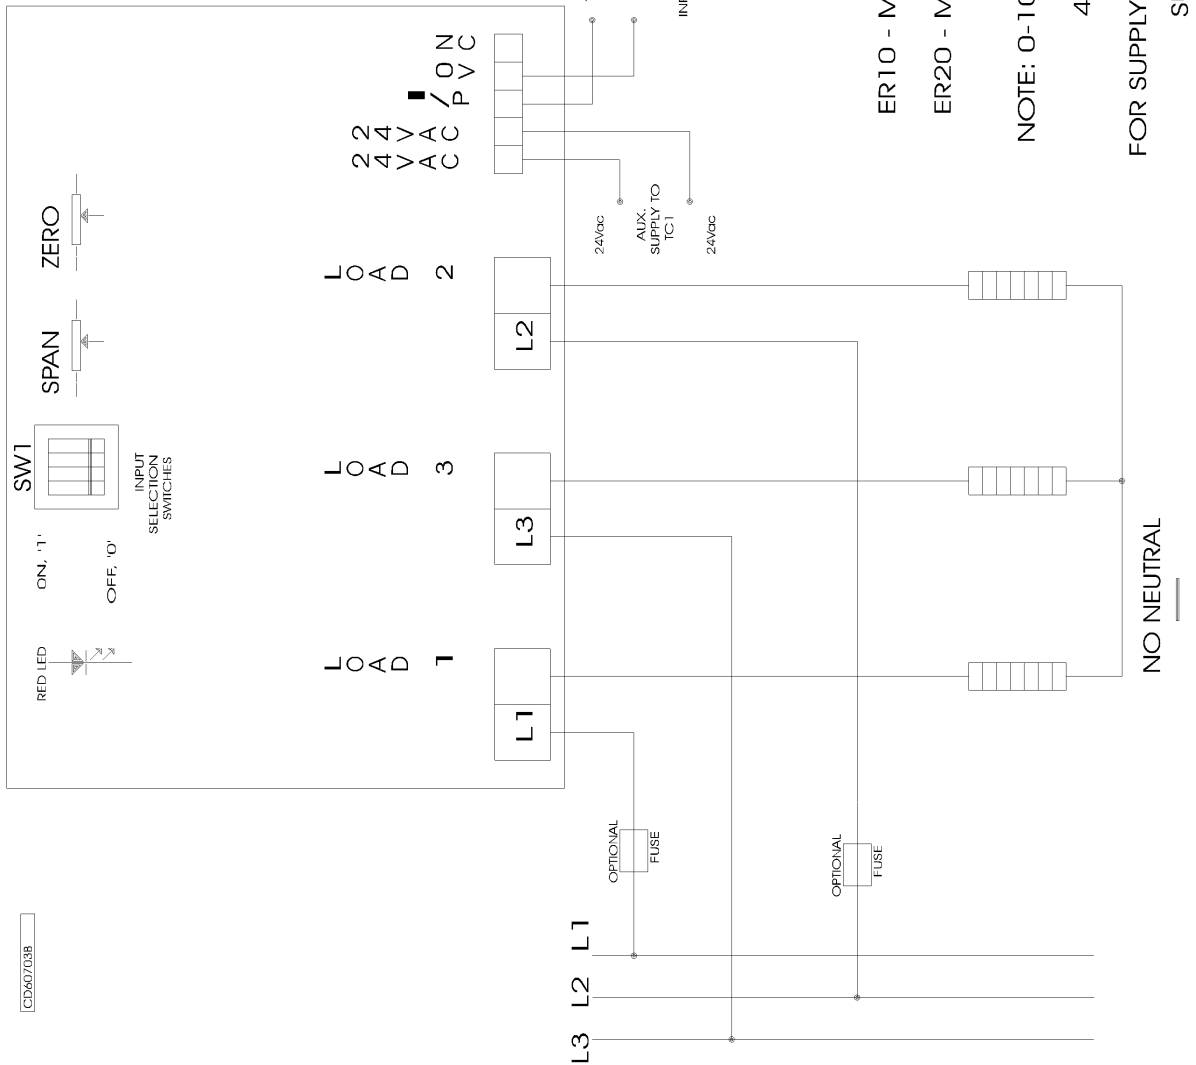

RED LED ILLUMINATE WHEN OUTPUTS ARE SWITCHED ON

CD607038

OPTIONAL FUSES

20A, 600V ULTRA

30A, 600V ULTRA

ER10 - MAX 15A/PHASE

ER20 - MAX 25A/PHASE

NOTE: 0-10V AS STANDARD, 380V TO 415V SUPPLY

4-20mA, SUFFIX 20

FOR SUPPLY VOLTAGE OTHER THAN 380V TO 415V,
SUFFIX SUPPLY VOLTAGE